

Error code E-Going

1. Table corresponding to error code

N°	Description of failure	LED Display	LCD Display
1	Defect of controller	1 st LED of battery charge level blinking	21
2	Defect of motor	2 nd LED of battery charge level blinking	23
3	Defect of brake sensor	3 rd LED of battery charge level blinking	25
4	Defect of speed sensor	4 th LED of battery charge level blinking	27
5	Defect of communication between display and controller	LED of mode 1 blinking	30
6	Defect of communication between display and battery	LED of mode 2 blinking	02
7	Defect of communication between 3 components (display/ controller/battery)	LED of mode 1 and mode 2 blinking	